

Lifetime Limited Warranty

PC Guardian Anti-Theft Products, Inc. ("PC Guardian"), warrants this lock against defects in material and workmanship for the lifetime of the lock. We will repair or replace any defective unit. Warranty does not cover cosmetic damages or damage from everyday wear and tear or from transportation by a common carrier.

Under no condition is PC Guardian liable for:

- Loss or damage to a computer.
- Loss of or damage to computer programs, records, or data.
- Consequential or incidental damages or expenses incurred, even if informed of their possibility.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PC GUARDIAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion of limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



Installation Instructions PC Guardian Ezolution™ Duo

Important!

To replace a lost key, PC Guardian must have the key's serial number.

Write your key's serial number in the space below and keep it in a secure place or register your serial number at:

www.pcguardian.com

1-800-288-8126 (US and Canada)
(415-459-0190)

www.pcguardian.com

U.S. Patents 5,983,679 and 6,321,579

P/N IN1-01793-01 12/2005



Insert the lock mechanism into the security slot on the device wall. The security slot is often marked with a chain link design.



No need to use the key. Simply push the button until it “clicks” into the locked position. You may hear a soft click as the lock engages.



A SNUG FIT IS MORE SECURE. To ensure a snug fit, attach one or more of the enclosed spacers to the bumper.



Repeat instructions for attaching the second lock to another device. To unlock: Insert key and turn counter clockwise. Button will pop out. Turn key clockwise to remove.