

Lifetime Limited Warranty

PC Guardian Anti-Theft Products, Inc. ("PC Guardian"), warrants this lock against defects in material and workmanship for the lifetime of the lock. We will repair or replace any defective unit. Warranty does not cover cosmetic damages or damage from everyday wear and tear or from transportation by a common carrier.

Under no condition is PC Guardian liable for:

- Loss or damage to a computer.
- Loss of or damage to computer programs, records, or data.
- Consequential or incidental damages or expenses incurred, even if informed of their possibility.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PC GUARDIAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion of limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



Installation Instructions PC Guardian Ezolution™ Expansion System

Important!

 
To replace a lost key, PC Guardian must have the key's serial number.

Write your key's serial number in the space below and keep it in a secure place or register your serial number at:


<http://www.pcgardian.com>

1-800-288-8126 (US and Canada)
(415-459-0190)

<http://www.pcgardian.com>
US Patent 5,983,679 and 6,321,579

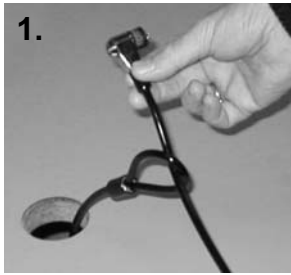

 
1. Lasso the Security Cable to a stationary object by passing the lock through the loop. Slip one (or more as needed) Expansion Locks over the security cable.

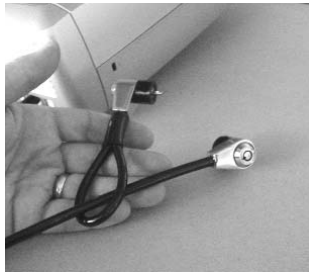

2. No need to use the key to engage the lock. Simply insert the locking mechanism into the security slot on the equipment; push the button until it “clicks” into the locked position. You may hear a soft click as the lock engages.



 3. A SNUG FIT IS MORE SECURE. If lock feels loose once engaged, use key to remove lock and attach one or more of the enclosed spacers to the bumper. Reinsert into security slot and push button.

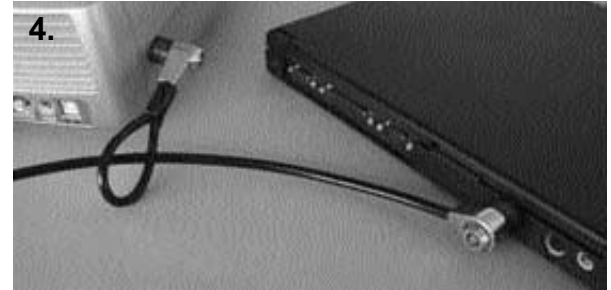

4. In the photo above, the Expansion Lock was added to secure a projector and a laptop to a single Notebook Guardian laptop anti-theft security cable.